
PACKAGE CONTENTS

connect


Universal Dual Bluetooth® Wireless Audio Transmitter FOR HEADPHONES AND SPEAKERS

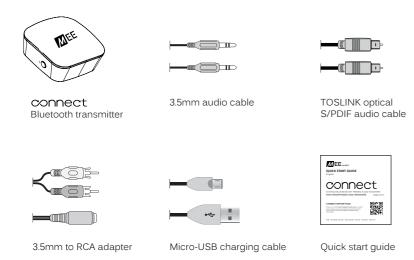

PRODUCT OVERVIEW

connect

Universal Dual Bluetooth® Wireless Audio Transmitter FOR HEADPHONES AND SPEAKERS

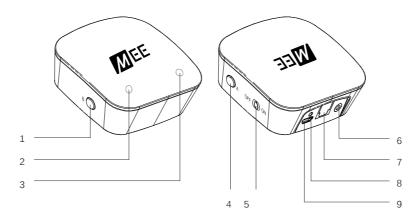

- 1 Pairing button "B" 2 Indicator light "B"
- 6 Analog audio input (3.5mm)
- 7 Digital audio input (TOSLINK optical S/PDIF)
- 3 Indicator light "A"
- 8 Power/charging indicator light
- 4 Pairing button "A"
- 9 Micro-USB power/charging port
- 5 On/off switch

1

4


STEP 2: CONNECTING TO TV

The Connect features three different connection options for compatibility with a wide range of devices. Consult the user manual for your TV/audio device to determine the appropriate audio output.

OPTION 1: DIGITAL OPTICAL AUDIO OUT (TOSLINK)

Newer TVs are usually outfitted with a TOSLINK digital optical (S/PDIF) audio out connector.

- A. Remove the protective caps from the included fiber optic TOSLINK cable.
- B. Plug the cable firmly into the optical audio output on the TV and the optical input of the Connect.

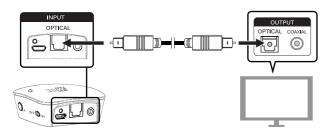


Note: If you are not receiving any sound through a TOSLINK connection, please make sure that the audio output settings on your TV, DVR, and other playback sources are set to "STEREO" or "PCM".

STEP 2: CONNECTING TO TV (CONTINUED)

OPTION 2: RCA AUDIO OUT (RED AND WHITE CONNECTORS)

Older TVs usually have analog audio output with red and white RCA connectors. To use the RCA output, plug the included RCA adapter into the matching-color RCA jacks on the TVs and attach to the 3.5mm stereo audio cable. Plug the other end of the audio cable into the 3.5mm input of the Connect.

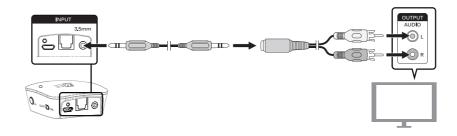

Note: Some older TVs do not automatically output sound via RCA for certain inputs. To enable RCA audio output, locate the audio output setting on your TV with the options "FIXED" and "VARIABLE", sometimes labeled "SET MONITOR OUT", and change this setting to "VARIABLE". If you still don't hear any sound, look for a setting that controls the TV's internal speakers and set it to "OFF".

STEP 1: POWERING ON

The *Connect* can be powered via USB or by its built-in battery. When powered via USB, the Connect does not need to be turned off after each use and the internal battery will be kept fully charged.

USB POWER


Plug the included micro-USB charging cable into a powered USB port** and the power/charging port of the *Connect*. The green indicator light will pulse slowly while the built-in battery is charging and stay solid once it is fully charged. Charging time is approximately 90 minutes.

BATTERY POWER

When unplugged from USB power, the *Connect* will be powered by its built-in battery. Please allow the *Connect* to charge fully before using it on battery power for the first time. When the battery is low, the green power LED will blink every second.

To turn the *Connect* on, slide the power switch to the "on" position.

**The USB outputs of some TVs do not provide a stable current. It is recommended to use a computer or USB wall charger (not included) to charge the Connect

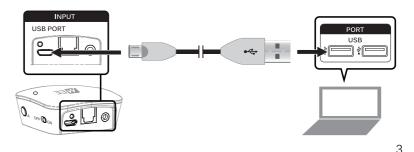


STEP 2: CONNECTING TO TV (CONTINUED)

OPTION 3: 3.5MM (1/8") HEADPHONE JACK

Some TVs and most standalone receivers feature a headphone jack on the front or side. To use the *Connect* with a headphone jack, plug the included 3.5mm stereo audio cable into the jack and the 3.5mm input of the Connect. A 1/4" adapter (not included) may be used with receivers that have a 1/4" jack.

Note: The output volume of the headphone jack can usually be controlled using the TV or receiver remote control and will affect the volume of the Connect.

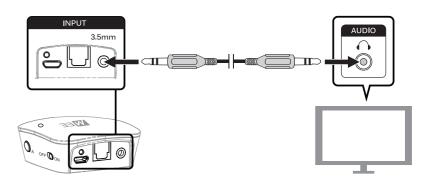

6


5

STEP 3: PAIRING WITH BLUETOOTH HEADPHONES/SPEAKERS

Prior to first use the *Connect* must be paired with at least one headphone, speaker, or other Bluetooth audio receiver.

Make sure your Bluetooth device is turned off and within 1 meter (3 feet) of the *Connect*. Put it in pairing mode (consult the user manual of the device if you are not sure how to enter pairing mode).

Once the headphone or speaker is in pairing mode, press pairing button "A" located on the right side of the *Connect*. A blue light will blink rapidly on the top of the unit to indicate that the *Connect* is ready to pair. Once the *Connect* and the device you are pairing with it are both in pairing mode simultaneously, they will automatically pair. Once paired, the light on top of the Connect will turn solid blue.

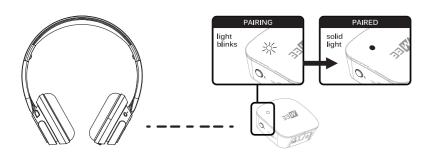


Note: Interference may occur with some TVs during the pairing process. If you are unable to pair your headphones with the Connect transmitter, turn off your TV and set-top box and repeat STEP 3.

ADJUSTING THE VOLUME

Volume can be individually adjusted using the built-in volume control of each headphone or speaker paired with the Connect.

With some TVs and connection options, TV volume may be further raised or lowered to change the volume of all devices paired with the *Connect*. For best audio quality. volume should be maximized on the TV and adjusted on each connected headphone or

STEP 1. MAXIMIZE TV VOLUME ADJUST HEADPHONE VOLUME

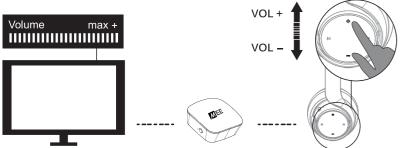


STEP 3: PAIRING WITH BLUETOOTH HEADPHONES/SPEAKERS (CONTINUED)

OPTIONAL: PAIRING A 2ND HEADPHONE OR SPEAKER

The Connect can stream audio to two Bluetooth headphones or speakers simultaneously. A second headphone or speaker can be paired after one is already connected (as indicated by a solid blue light on top of the unit). To pair the second device, put it in pairing mode and then press pairing button "B" on the Connect. A blue light will flash to indicate that the *Connect* is in pairing mode and turn solid blue once

Note: sound may be intermittent while the second device is in the process of pairing.

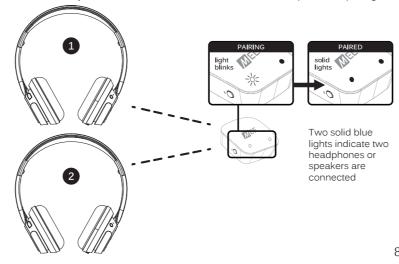

SUBSEQUENT USE

To reconnect a previously paired headphone or speaker, turn the Connect on first (if turned off) and then turn on the headphone or speaker. A solid blue light on the Connect will indicate that a connection has been established. It may take up to 60 seconds for audio transmission to begin.

FACTORY RESET / CLEAR MEMORY

The Connect can be reset by holding the pairing button "A" for approximately 5 seconds until the blue indicator light begins to blink. The unit will enter pairing mode and previously paired devices will be cleared from memory.

SAFETY & CARE

Taking care of your device in accordance with the following recommendations will ensure optimal performance and a long lifespan.

- Battery performance will be severely decreased when stored in extreme temperatures: below -10°C/14°F or above 45°C/113°F including direct sunlight.
- Clean with a soft, slightly damp cloth. Do not use chemical cleaners.
- There are no user replaceable/reparable parts in the transmitter. Disassembling it will void your warranty.
- Do not expose the device to liquids. If the device comes in contact with liquids, quickly wipe away. If submersed in water, do not turn the device on until completely dried. Note: liquid submersion voids the warranty.
- Do not use around flammable gasses as fire or explosion may occur.

WARRANTY

MEE audio products purchased from authorized retailers are covered by a 1-year manufacturer warranty. Visit www.MEEaudio.com/warranty for warranty information.



connect

Universal Dual Bluetooth® Wireless Audio Transmitter FOR HEADPHONES AND SPEAKERS Model: AF-T1B

CONNECT SUPPORT PAGE

Please visit the Connect Support Guide page at www.MEEaudio.com/ConnectSupportGuide for easy-to-follow video setup guides, the full user manual, and the latest troubleshooting information.



HD WIRELESS SOUND FOR YOUR HDTV



support@MFFaudio.com

Have a question? Email support@MEEaudio.com

10







MEE audio and its logo are registered trademarks of S2E, Inc. All rights reserved.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by **MEE audio** is under license. Other trademarks and trade names are those of their respective owners. Qualcomm aptX is a product of Qualcomm Technologies International, Ltd.

7